


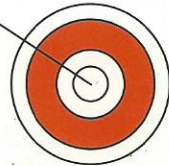

DO NOT PUT SEALANT
OUT OF THE RED AREAS

2
DRILL
TRANSOM
ALL THRU
DIAM 1/4"



1

PREDRILL HOLES
DIAM 9/64 X 1/2 DEEP
3 PLACES
& COUNTERSINK 1/4

